



Connecting hard drives to record archives to the Line NVR 2U Linux video server





3 Select your hard drive from the menu on the left.



4) If necessary, format the hard drive. Select **Ext4** as the file system.





| 5) | Mount the disk | Mount Options | (| | | | | |
|----|-------------------|--|--|--|--|--|--|--|
| | for the system to | User Session Defaults | | | | | | |
| | recognize it. | Mount Options Mount at system startup | | | | | | |
| | | Show in user interface Require additional authorization to mount | | | | | | |
| | | | | | | | | |
| | | Display Name | | | | | | |
| | | Icon Name | | | | | | |
| | | Symbolic Icon Name | | | | | | |
| | | nosuid,nodev,nofail,x-gvfs-show | nosuid,nodev,nofail,x-gvfs-show t /mnt/73cc4746-ab58-4fe6-8182-bbde1158c8bd | | | | | |
| | | Mount Point /mnt/73cc4746-ab58-4fe6-8182-bbde1158c8b | | | | | | |
| | | Identify As /dev/disk/by-uuid/73cc4746-ab58-4fe6-8182- | bbde1158c8bd 🔻 | | | | | |
| | | Matches the device with the given UUID | | | | | | |
| | | Filesystem Type auto | | | | | | |
| | | | ancel 🦿 OK | | | | | |

6



Disable Automatic mount options and click OK.

To change the mount settings, enter the **root** password.

After restarting the server, the disk will be available /mnt/.....



You can mount the disk without rebooting the server.

7

Points 5 and 6 must be performed to automatically mount the drive when the server starts.



8 Connecting the disk for archive recording. Go to the folder /mnt/......

Create a folder (for example, line8) and select it.

| 🧮 Connect to Server 🛛 🕺 Mi | anage 🚊 User Actions 📲 Choose S | Screen Division 🎇 Playback | | | | | | | |
|----------------------------|-----------------------------------|---|-------------------------|--|--------------|---|---------------|--------------------|------------------|
| Sannect to Sarver \chi W | avage ⊉, User Actions ₽ Choices : | Screen Division 🏠 Physical Camera group to record Cameras <u>Bros</u> Dept Ecci to add new parts | h of archive <u>may</u> | Third stream: switched on -block 1158/c8but - block 1158/c8but - coal dask (X() - coal dask (X() - coal dask (X) - coal | Parth - X | 3 | T | e espace 2.0 TB | • <i>i</i> _ D × |
| | | | | Create Remove | Apply Cancel | | Add Group - | Delete Group | |
| | | | | | | | Save and Exit | Apply Cancel | |
| | | | | | | | | | |
| 51 F3 0 TB Hard Disk1 | - observer | - observer | - obconuor | EUSB DISK - F | ile Manager] | | | | |

>