 
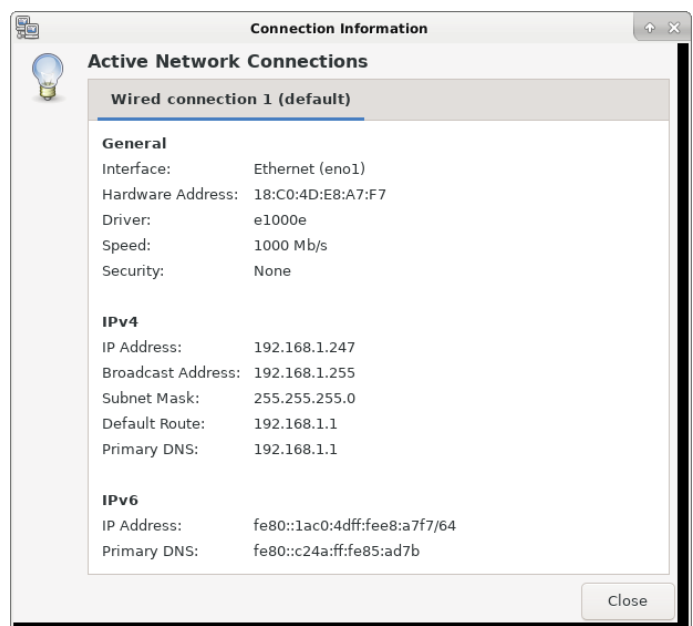 



Network connection settings for Line NVR 2U Linux

- 1 **What is the default method?** > DHCP – automatically receive network settings.
- 2 **How can I find my IP address?** > Click the Network icon in the bottom right corner of the screen.

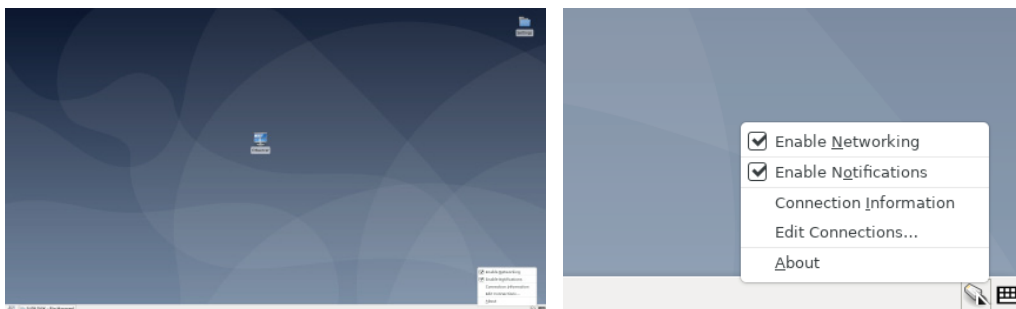

3 How can I change the local IP address?
 
> Click the Network icon in the bottom right corner of the screen.

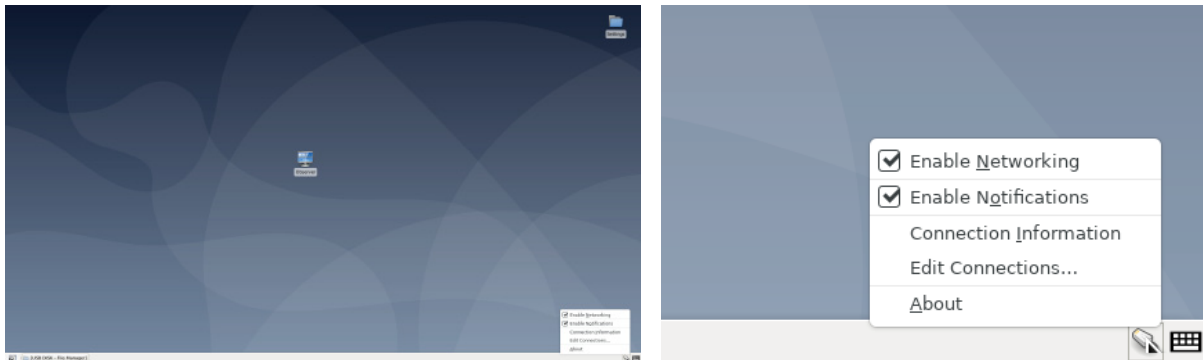

Select "Change connection..." and select the network interface.

